

GLOstik™

Flying Insect Trap by **CATCHMASTER**

INSTRUCTION MANUAL

IMPORTANT: READ AND SAVE THESE SAFETY INSTRUCTIONS




Avoid contact with the tube as it is coated with adhesive.

In case of contact with adhesive, remove with vegetable oil or mineral spirits.




1 Slowly lift the GLOstik™ by holding the black protective cap. The orange cap indicates the replacement glue tube (for later use).

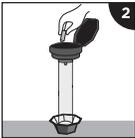

2 Open the base and install 3 AA batteries.*

NOTE: Battery door may open on hinge or remove completely, depending on model. Replace or close door before use.

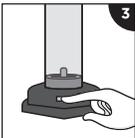

3 Slide power switch to the ON position.

To maximize battery life, switch power OFF after use.

* Batteries Not Included


Replacing Used Glue Tubes



1 Remove used tube from base. Hold from the cap and pry off from the base. Dispose used glue tube.



2 Remove tube with the orange cap from box. Remove the orange cap from tube by holding black cap and prying off orange cap.

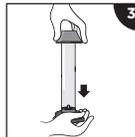

3 Replace tube. Hold by protective cap and press down firmly onto base.

Because of dust and other environmental factors, replace glue tube every 30 days or when tube is full. Reorder online at:


www.glostiktrap.com

WARNING

THIS PRODUCT IS NOT WATER RESISTANT. TO AVOID RISK OF ELECTRICAL SHOCK, DO NOT USE WHERE IT MAY BE EXPOSED TO WATER.

KEEP OUT OF REACH OF CHILDREN.

DO NOT PLACE UNIT WHERE IT WILL BE SUBJECTED TO EXTREME HEAT OR DIRECT SUNLIGHT.

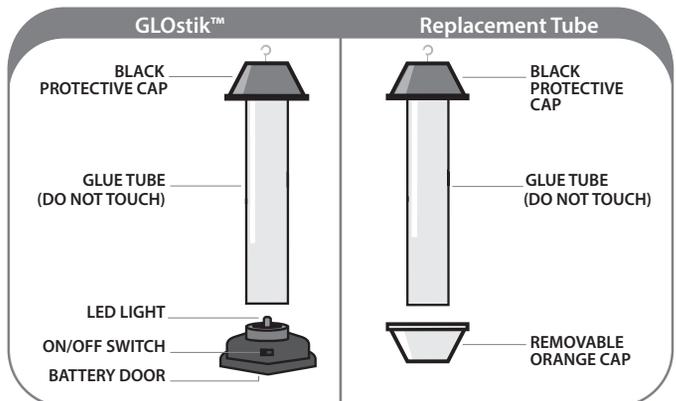

VISIT YOUR LOCAL RETAILER OR www.glostiktrap.com FOR REPLACEMENT GLUE TUBES.